 





DISABLE ALL WARMER PLATES INSTRUCTIONS


Alpha Brewer | Model: ALP3GT15A826

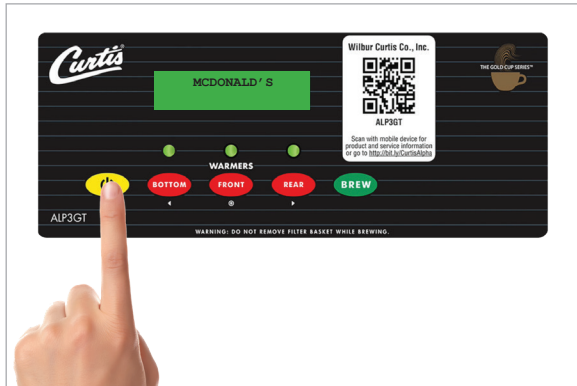

 
- 1 Press YELLOW "Power" button to turn brewer OFF.

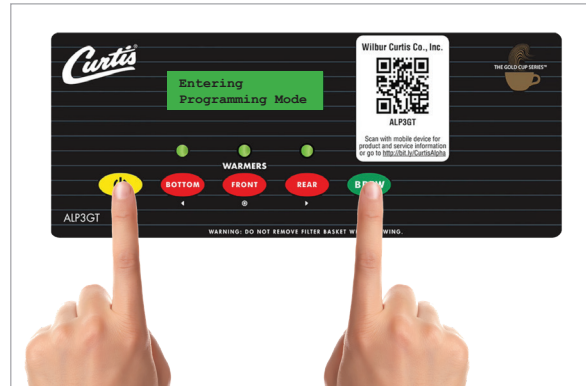

 - 2 Hold down the GREEN "Brew" button while pressing the YELLOW "Power" button one time. The screen will display "Entering Programming Mode".

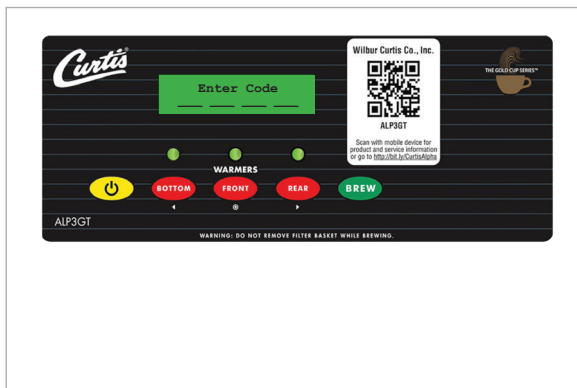

- 3 Release buttons when "Enter Code" is displayed on screen.

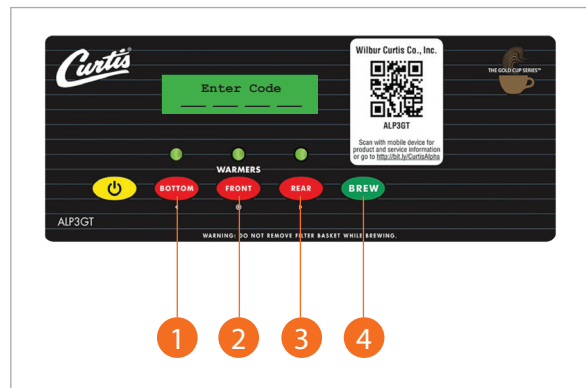


- 4 Enter code by pressing "Bottom", "Front", "Rear", "Brew". Screen will then display "Program Menus".




DISABLE ALL WARMER PLATES INSTRUCTIONS


Alpha Brewer | Model: ALP3GT15A826

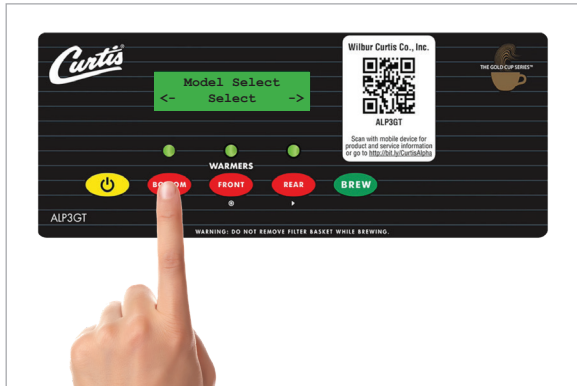

 
5 Press "Bottom" button 3 times until screen displays "Model Select".

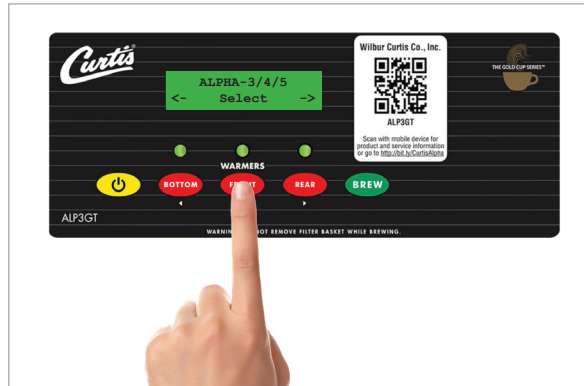

6 Press "Front" button 1 time. Screen will display "Alpha-3/4/5".

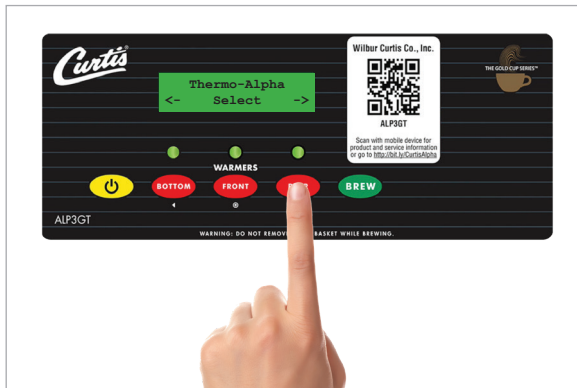

 7 Press "Rear" button 2 times. Screen will display "Thermo-Alpha".

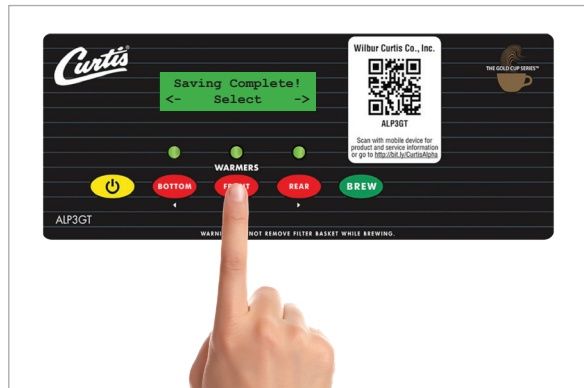


8 Press "Front" button 1 time. Screen will display "Saving Complete!" and brewer will restart.



DISABLE ALL WARMER PLATES INSTRUCTIONS

Alpha Brewer | Model: ALP3GT15A826

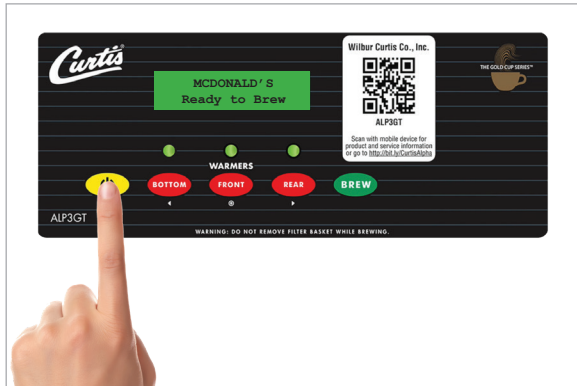

- 9 Press YELLOW "Power" button to turn brewer ON. All warming plates will now remain OFF.