 
# Iced Coffee Kit Instructions (Sweet Tea)





#### Questions or problems call: 1.800.421.6150

Recommendation is to have two people (Managers or Supervisor) program brewer. One to read and the other to perform tasks.

#### The Iced Coffee Kit contains:

- Iced Coffee Brew Basket
- Iced Coffee Overlay
- Alcohol Wipe

# Installing the Board Overlay



1

Turn **OFF** power to the brewer at the rear toggle switch.

2

Clean the existing overlay on the Brewer Control Panel with an alcohol wipe (provided with the overlay) and allow the panel to dry.

3


Peel the protective backing off of the new Overlay and attach it to the front of the Brewer Control Panel.




Return the rear toggle switch to the ON position.


Perfecting the art of brewing since 1941


### Selecting the Brewer Model

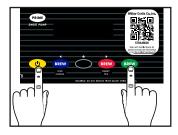


If the display screen is lit on the board, turn **OFF** by pressing the **YELLOW** power button once. To enter the Programming Mode press and hold the **GREEN** brew button. While pressing the **GREEN** brew button, press and hold the **YELLOW** power button for approximately 5 seconds until "**Enter Code**" appears on the display.

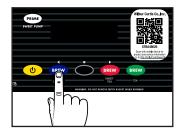

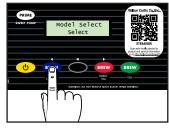

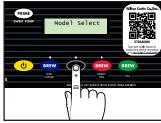

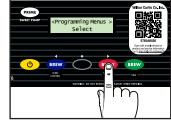





Enter the access code by consecutively pressing **BLUE**, **BLACK RED and GREEN** buttons.



Press the **BLUE** brew button three times until "**Model Select**" appears on the display.



Press the **BLACK** button once.




Press **RED** brew button repeatedly until the display reads "**ICE COF/SWT TEA.**"



When "ICE COF/SWT TEA" appears on the display, press the **BLACK** button. "Saving Complete" briefly appears on the display. This enables iced coffee.

# Setting the Tea By Time

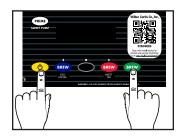

#### Return to program mode

Press and hold the **GREEN** brew button. While pressing the **GREEN** brew button, press and hold the **YELLOW** power button for approximately 5 seconds until "**Enter Code**" appears on the display. Enter the access code by consecutively pressing the **BLUE**, **BLACK**, **RED and GREEN** buttons. "**Program Menus**" appears on the display.



Press the **RED** brew button until "**Tea By Time**" appears on the display. Press the **BLACK** button once. The display should read "**Select Brew Button**."

#### Verify Sweet Tea Setting



Press the **RED** brew button. Verify the time is correct (4 minutes 36 seconds).

• IF TIME IS CORRECT, press the RED brew button until "ex" flashes on the display. Then press the **BLACK** button two times. The display should read "Select Brew Button." Proceed to step 10

• IF TIME IS INCORRECT, press the **RED** brew button until the minutes flashes. Use the **BLACK** button to increase or decrease the time. Press the **RED** brew button until seconds flashes. Use the **BLACK** button to increase or decrease the time. Once the time is correct, press the **RED** brew button until "ex" flashes. Then press the **BLACK** button two times. The display should read "**Select Brew Button**." Proceed to step **10** 


#### Verify Unsweetened Tea Setting



Press the **GREEN** brew button. Verify the time is correct (**3 minutes 35 seconds**).

• IF TIME IS CORRECT, press the RED brew button until "ex" flashes on the display. Then press the **BLACK** button two times. The display should read "Select Brew Button." Proceed to step **1** 

• IF TIME IS INCORRECT, press the RED brew button until the minutes flashes. Use the **BLACK** button to increase or decrease the time. Press the **RED** brew button until seconds flashes. Use the **BLACK** button to increase or decrease the time. Once the time is correct, press the **RED** brew button until "ex" flashes. Then press the **BLACK** button two times. The display should read "**Select Brew Button**." Proceed to step **11** 

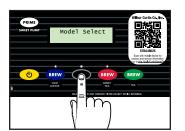

# Programming Menus > Select Where during 6, the Select Sele

#### Enter Iced Coffee Setting




Press the **RED** brew button until the minutes flashes. Use the **BLACK** button to increase or decrease the time. Press the **RED** brew button until seconds flashes. Use the **BLACK** button to increase or decrease the time. Once the time is correct, press the **RED** brew button until "ex" flashes. Then press the **BLACK** button once, display should read "**Tea by Time.**" Press the **RED** button until "**Tea Dilut Time**" appears on the display. Press the **BLACK** button until display reads "**Select Brew Button**." Proceed to step **12** 

PRIME SWEET PUMP	Tea Dilut. Time Select	Where Curitis Co., Inc.
	REW BREW OFFE	BREW TZA XIT WHEE EERVING,

#### Enter Sweet Tea Setting

Press the **RED** brew button. <u>The time must be set at "54 seconds"</u>. Press the **RED** brew button until the minutes or seconds flashes. Use the **BLACK** button to increase or decrease the time until the time is set to <u>54 seconds</u>. Once time is correct press the **RED** brew button until "**ex**" flashes on the display. Then press the **BLACK** button twice, display should read "**Select Brew Button**." Proceed to step **13** 


#### Enter Unsweetened Tea Setting

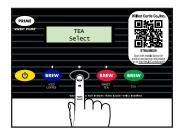

Press the **GREEN** brew button. <u>The time must be set at "1 minute</u> <u>40 seconds</u>". Press the **RED** brew button until the minutes or seconds flashes. Use the **BLACK** button to increase or decrease the time until the time is set to <u>1 minute 40 seconds</u>. Once time is correct press the **RED** brew button until "**ex**" flashes on the display. Then press the **BLACK** button twice, display should read "**Select Brew Button.**" Proceed to step <u>14</u>

#### Enter Iced Coffee Setting

14

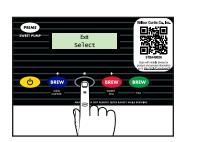

Press the **BLUE** brew button. <u>The time must be set at "42 seconds</u>". Press the **RED** brew button until the minutes or seconds flashes. Use the **BLACK** button to increase or decrease the time until the time is set to <u>42 seconds</u>. Once time is correct press the **RED** brew button until "ex" flashes on the display. Then press the **BLACK** button once, display should read "**Tea Dilut Time**." Press **BLUE** brew button until "**Exit Select**" appears on display. Press **BLACK** button to **EXIT** programming mode. Brewer is ready for operations. Display should read "**McDonald's Ready to Brew**".



Wilbur Curtis Co., Inc. / 6913 Acco Street / Montebello CA 90640 800.421.6150 / 323.837.2300 / www.wilburcurtis.com *Perfecting the art of brewing since 1941*