 
Iced Coffee Kit Instructions (Southern Sweet Tea)





Questions or problems call: 1.800.421.6150

 
Recommendation is to have two people (Managers or Supervisor) program brewer. One to read and the other to perform tasks.

The Iced Coffee Kit contain:

- Iced Coffee Brew Basket
- Iced Coffee Overlay
- Alcohol Wipe

■ Installing the Board Overlay








Clean the existing overlay on the Brewer Control Panel with an alcohol wipe (provided with the overlay) and allow the panel to dry.



Peel the protective backing off of the new Overlay and attach it to the front of the Brewer Control Panel.

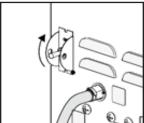


Return the rear toggle switch to the ON position.




Board Reprogramming Instructions


■ Selecting the Brewer Model

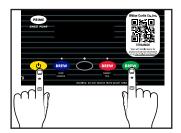


If the display screen is lit on the board, turn **OFF** by pressing the **YELLOW** power button once. To enter the Programming Mode press and hold the **GREEN** brew button. While pressing the **GREEN** brew button, press and hold the **YELLOW** power button for approximately 5 seconds until "**Enter Code**" appears on the display.

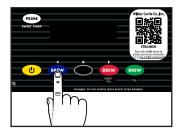


Enter the access code by consecutively pressing **BLUE**, **BLACK RED and GREEN** buttons.

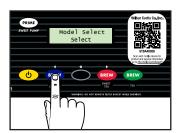


Press the **BLUE** brew button three times until "**Model Select**" appears on the display.

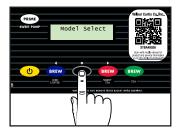

Press the **BLACK** button once.

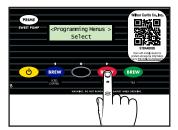



Press **RED** brew button repeatedly until the display reads "**ICE COF/STHN TEA.**"

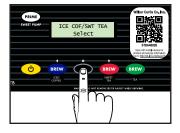



When "ICE COF/STHN TEA" appears on the display, press the BLACK button. "Saving Complete" briefly appears on the display. This enables iced coffee.

Setting the Tea By Time

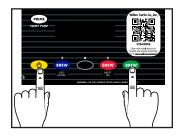

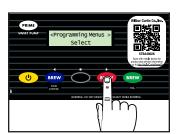

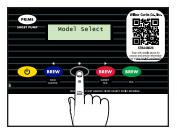

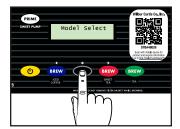

Return to program mode

- Press and hold the **GREEN** brew button. While pressing the **GREEN** brew button, press and hold the **YELLOW** power button for approximately 5 seconds until "**Enter Code**" appears on the display. Enter the access code by consecutively pressing the **BLUE**, **BLACK**, **RED and GREEN** buttons. "**Program Menus**" appears on the display.
- Press the **RED** brew button until "**Tea By Time**" appears on the display. Press the **BLACK** button once. The display should read "**Select Brew Button.**"

Verify Southern Sweet Tea Setting

- Press the **RED** brew button. Verify the time is correct (4 minutes 36 seconds).
 - IF TIME IS CORRECT, press the RED brew button until "ex" flashes on the display. Then press the BLACK button two times. The display should read "Select Brew Button." Proceed to step 10
 - IF TIME IS INCORRECT, press the RED brew button until the minutes flashes. Use the BLACK button to increase or decrease the time. Press the RED brew button until seconds flashes. Use the BLACK button to increase or decrease the time. Once the time is correct, press the RED brew button until "ex" flashes. Then press the BLACK button two times. The display should read "Select Brew Button." Proceed to step 10


Verify Unsweetened Tea Setting

- Press the **GREEN** brew button. Verify the time is correct (3 minutes 35 seconds).
 - IF TIME IS CORRECT, press the RED brew button until "ex" flashes on the display. Then press the BLACK button two times. The display should read "Select Brew Button." Proceed to step 11
 - IF TIME IS INCORRECT, press the RED brew button until the minutes flashes. Use the BLACK button to increase or decrease the time. Press the RED brew button until seconds flashes. Use the BLACK button to increase or decrease the time. Once the time is correct, press the RED brew button until "ex" flashes. Then press the BLACK button two times. The display should read "Select Brew Button." Proceed to step 11

Enter Iced Coffee Setting




Press the **BLUE** brew button. **The time must be set at "3 minutes 28 seconds"**.

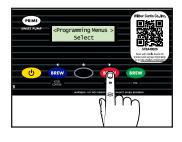

Press the **RED** brew button until the minutes flashes. Use the **BLACK** button to increase or decrease the time. Press the **RED** brew button until seconds flashes. Use the **BLACK** button to increase or decrease the time. Once the time is correct, press the **RED** brew button until "ex" flashes. Then press the **BLACK** button once, display should read "**Time by Time.**" Press the **RED** button until "Tea Dilut Time" appars on the display. Press the **BLACK** button until display reads "**Select Brew Button**." Proceed to step


Setting the Tea Dilution Time

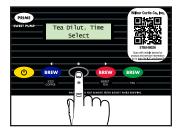

Enter Southern Sweet Tea Setting

Press the RED brew button. The time must be set at "49 seconds".


Press the RED brew button until the minutes or seconds flashes. Use the BLACK button to increase or decrease the time until the time is set to 49 seconds. Once time is correct press the RED brew button until "ex" flashes on the display. Then press the BLACK button twice, display should read "Select Brew Button." Proceed to step 13

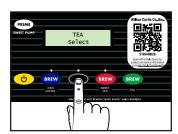

Enter Unsweetened Tea Setting

Press the GREEN brew button. The time must be set at "1 minute 40 seconds". Press the RED brew button until the minutes or seconds flashes. Use the BLACK button to increase or decrease the time until the time is set to 1 minute 40 seconds. Once time is correct press the RED brew button until "ex" flashes on the display. Then press the BLACK button twice, display should read "Select Brew Button." Proceed to step



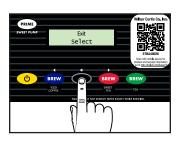

Press the **BLUE** brew button. The time must be set at "42 seconds".

Press the **RED** brew button until the minutes or seconds flashes. Use the **BLACK** button to increase or decrease the time until the time is set to 42 seconds. Once time is correct press the **RED** brew button until "ex" flashes on the display. Then press the **BLACK** button once, display should read "Tea Dilut Time." Press **BLUE** brew button until "Exit Select" appears on display. Press **BLACK** button to **EXIT** programming mode. Brewer is ready for operations. Display should read "McDonald's Ready to Brew".

